

## **GUIDANCE** non-stick cookware

## metalac

## **ENG**

## For long life of your cookware please follow these simple instructions:

Before first use wash cookware with warm water and mild detergent, rinse well and dry with soft cloth . For best results before use always coat inside surface of the pan with thin layer of edible oil or grease, absorb exceeding oil with a towel. Cook on medium temperatures . Don't overheat the pan; don't leave it unattended on a heat source . Sudden changes of temperature may damage the coating and the pan base . Use with a hob size corresponting to the pan bottom diameter. Do not drag the cookware over the glass-ceramic hob to avoid possible damages. Always lift the cookware when you need to move it. Do not shake frypans, woks or stewpots on a cook top while cooking. Cookware bottom should always be well dry before placed on a cook top, in particular on a glassceramic plate, otherwise it will stick to the plate. Take care that both the hob and the cookware are perfectly clean to avoid any scratches to your glass-ceramic surface due to impurities. With gas cooker adjust the flame to cover only pan bottom . When stiring food in the pan always use wooden or plastic utensils. Do not cut food directly in the pan . After each use it is recommandable to wash the pan by sponge with warm water and mild detergent . Do not use wire scrub or abrasive cleaning means . This type of cookware is dishwasher safe. By using green energy Metalac actively contributes to spreading environmental awareness and creating a healthier future for generations to come.



Kneza Aleksandra 212, 32300 Gornji Milanovac, Srbija www.metalacposudie.com posudje@metalac.com



032/404040 kontakt@metalac.co.rs













